
 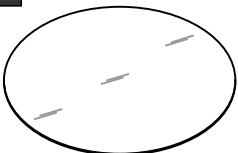



# ASSEMBLY INSTRUCTION

SKU: DT-07-GLA-WAL BROKLYN GLASS TOP & WOODEN BASE 120CM ROUND DINING TABLE




|                                                                                                                                    |                                                                                                                                  |                                                                                                                             |                                                                                                                              |
|------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b> Table Top<br><br>1PC                     | <b>B</b> X Leg<br><br>1PC                       | <b>C</b> V Leg<br><br>2PCS                | <b>D</b> Bolt<br>5/16" x 63MM<br><br>2PCS |
| <b>E</b> Spring Washer<br>1/4"<br><br>2PCS        | <b>F</b> Flat Washer<br>1/4" x 19mm<br><br>6PCS | <b>G</b> Allen Key<br>Ø10*40<br><br>2PCS  | <b>H</b> Screw<br>1/4"x15mm<br><br>3PCS   |
| <b>I</b> Spring Washer<br>5/16*25mm<br><br>4PCS | <b>J</b> Spring Washer<br>1/4"<br><br>1PC     | <b>K</b> Allen wrench<br>5mm<br><br>1PC | <b>L</b> Allen wrench<br>4mm<br><br>1PC |

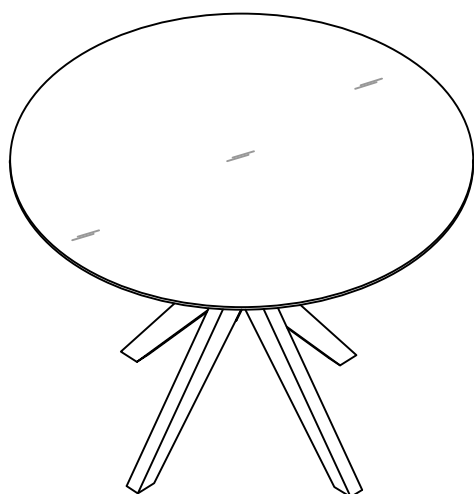

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

The Bolt (D) , spring washer (E) , flat washer (F) and wooden tenon (G) are connected with the leg (B) and the leg (C) by a hexagon wrench (K)

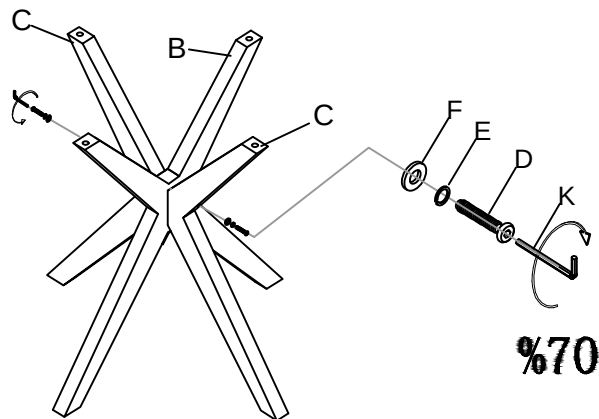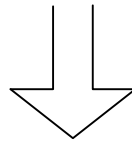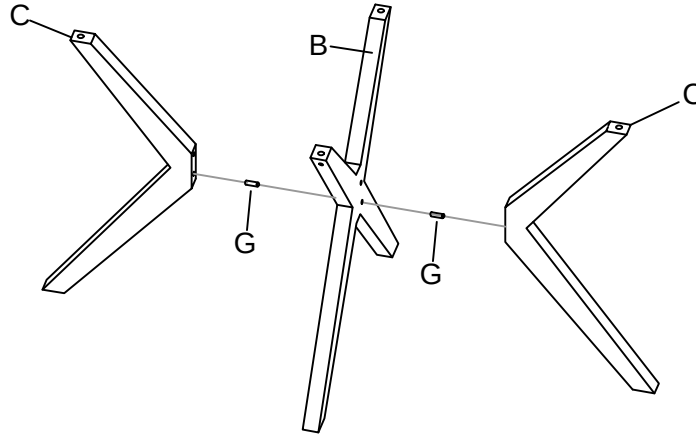

3

The flat washer (F) is connected with the glass panel (A) by a hexagon wrench (L) and a leg(B) (C) with bolts (I) and a flat washer (F)

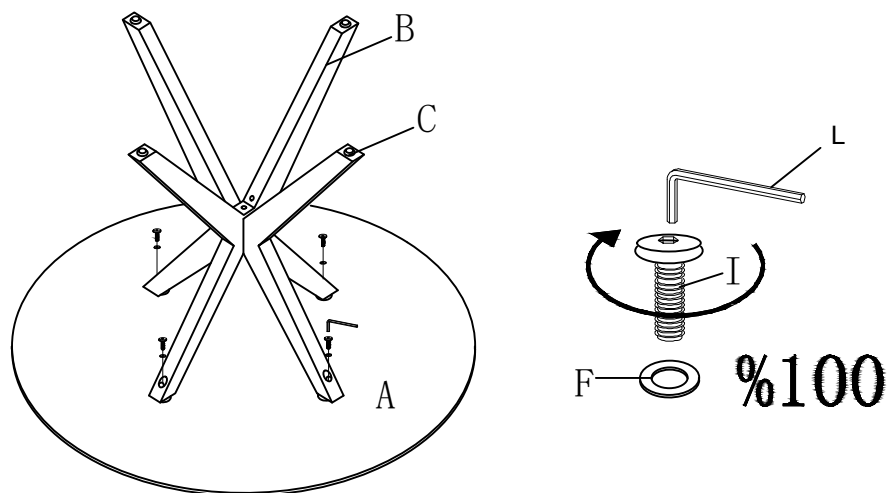

3

Connect (L) legs (B) and (C) with bolts (H) and plates (J)

